



**Alcon Smart Surveillance Software v7.12  
Complete Operation Manual**



**Alconlink**

**Alcon Wireless PVT. LTD.**

**January 2016**

# **Alcon Smart Surveillance Software**

## **Operation Manual For Remote Viewing Using P2P ID**

**V7.12**

**January 2018**

## IV. Software Installation and Uninstallation

### 4.1 Software installation

Take " Alcon Smart Surveillance Software V7.12A. EXE " installed in Windows 7 as an example, installation methods of other versions are same.

1. Find and install " Alcon Smart Surveillance Professional V7.12A EXE " in installation disk

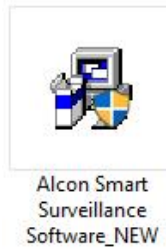


Figure 4.1.1

2. Double click to enter installation program. As shown in Figure 4.1.2



Figure 4.1.2

3. Click "Next". Successively click "Next". As shown in Figure 4.1.3

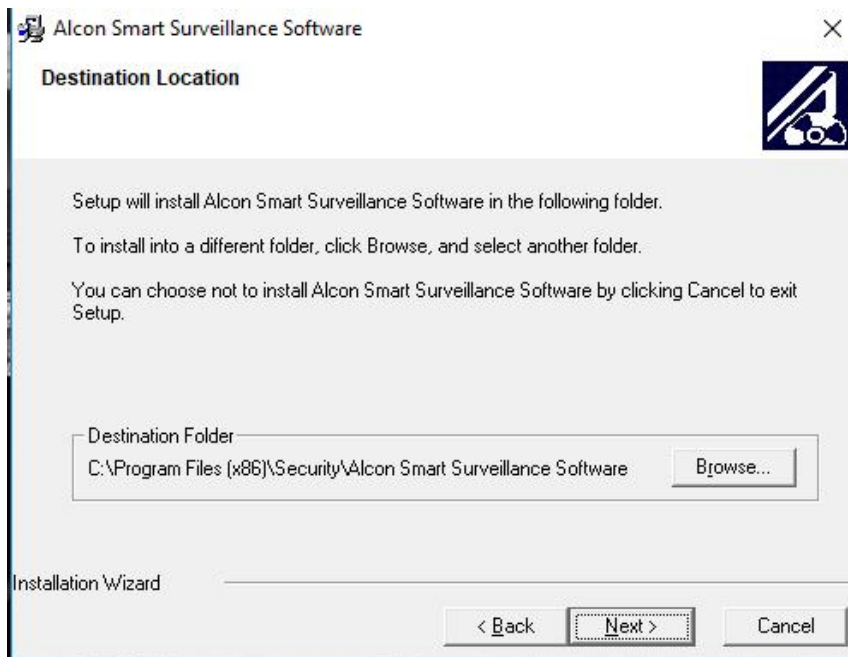


Figure 4.1.3

The default installation directory is Disk C, or click, browse and selects an installation directory customized: As shown in Figure 4.1.4

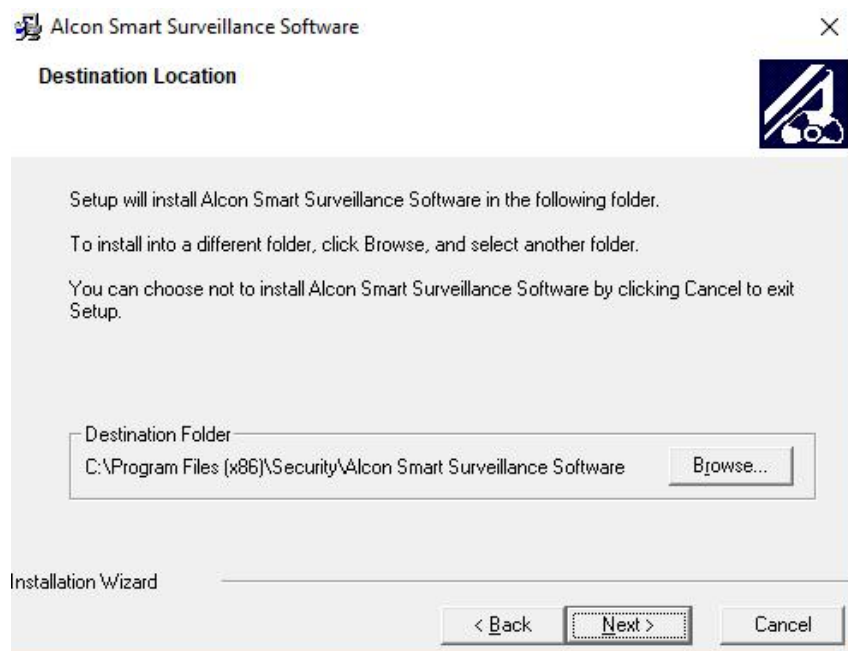


Figure 4.1.4

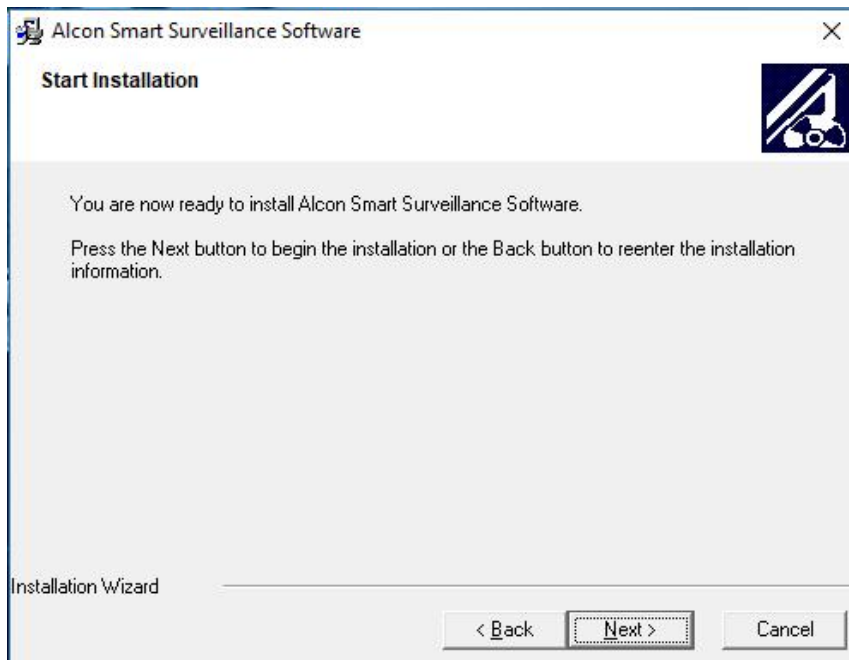


Figure 4.1.5

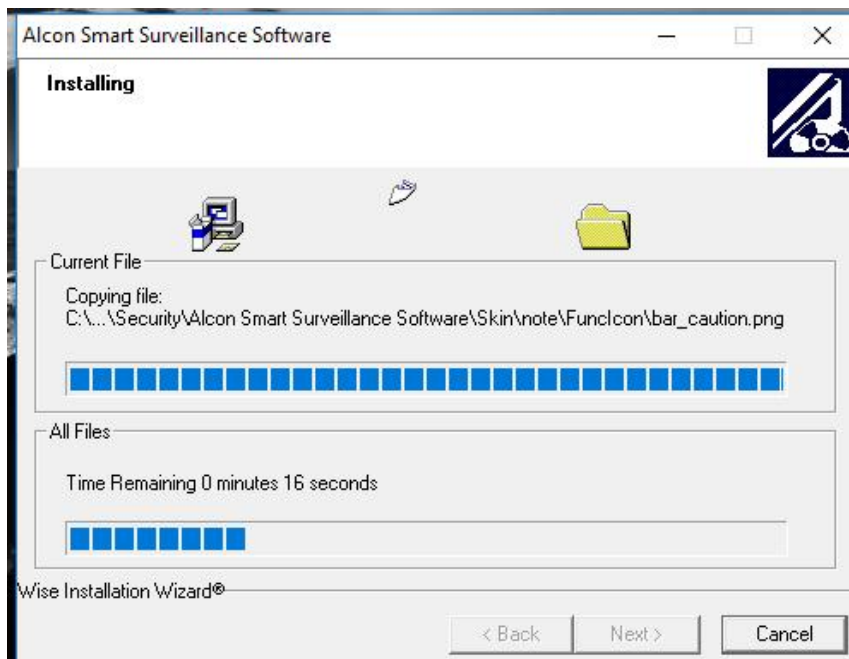


Figure 4.1.6

There is a prompt "install C++ system library or not" during installation, as shown in Figure 4.1.7. In case of initial installation, please select "install"; if it has installed, please select "cancel". Upon installation, click "Finish" as shown in Figure 4.1.8.

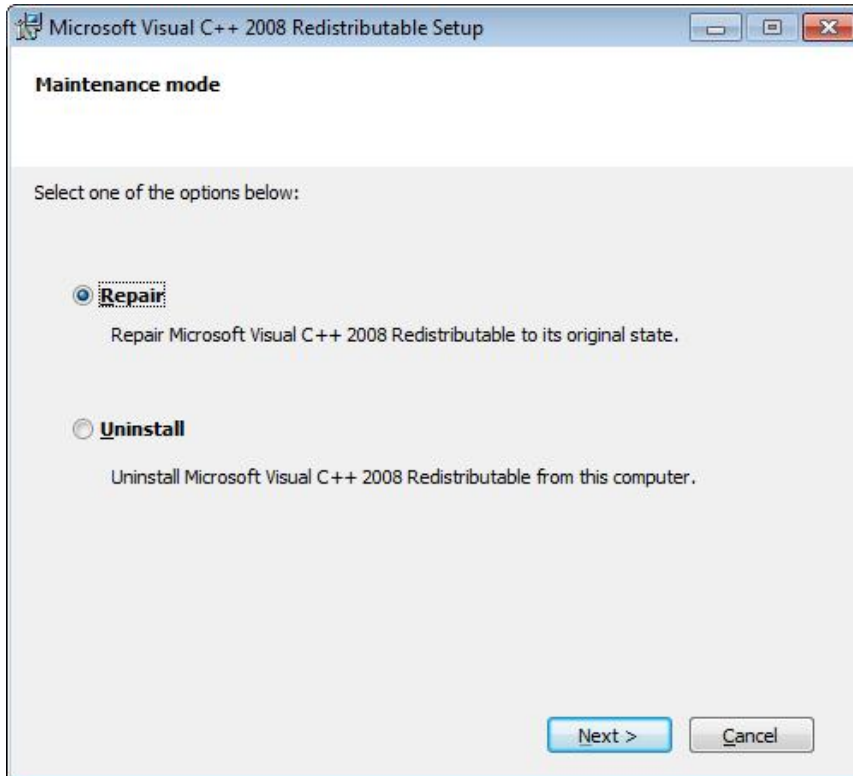


Figure 4.1.7

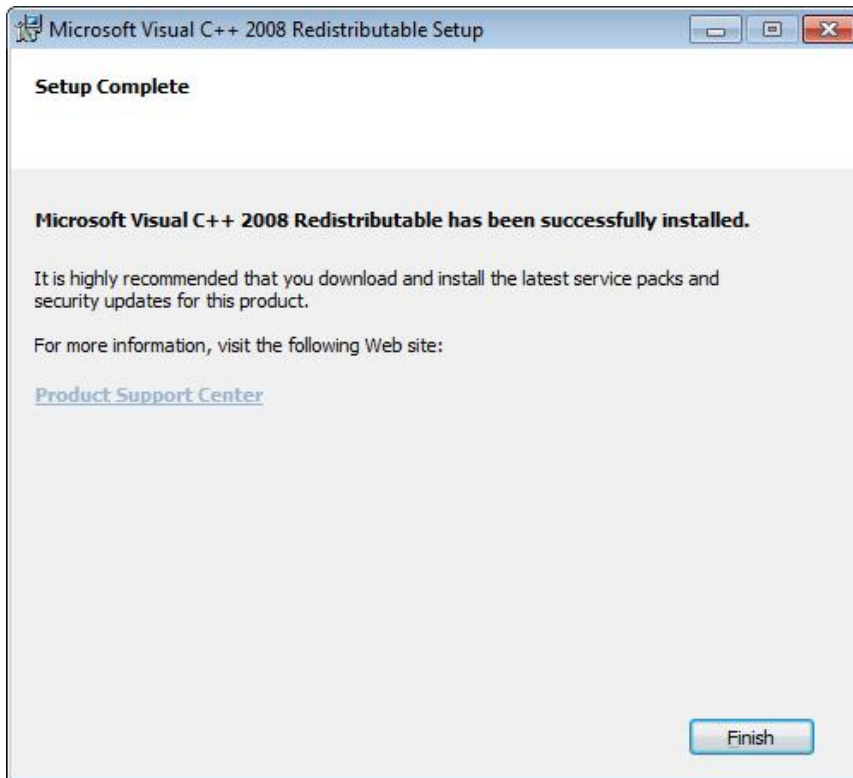


Figure 4.1.8

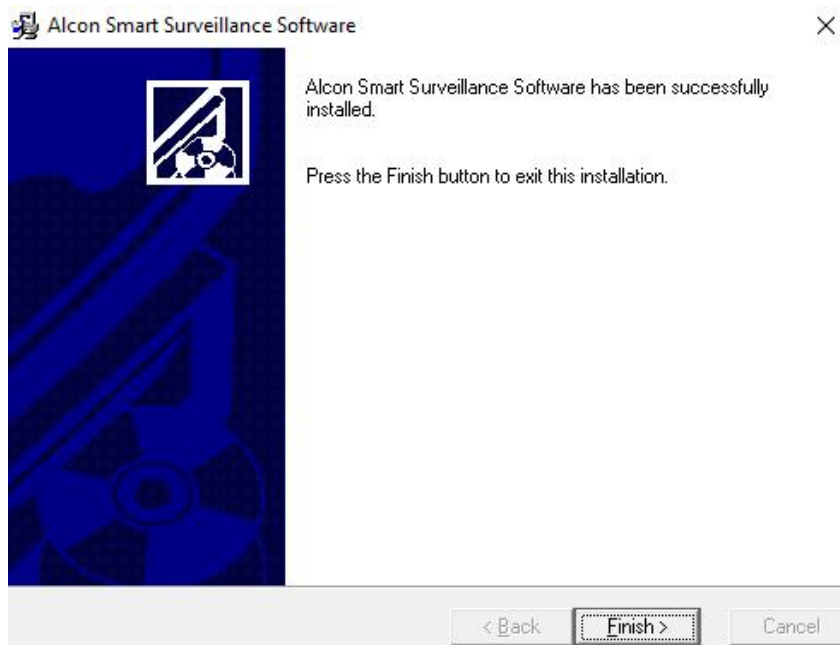


Figure 4.1.9

Click "OK" to finish the installation. (Note: system reboot is required for installation)

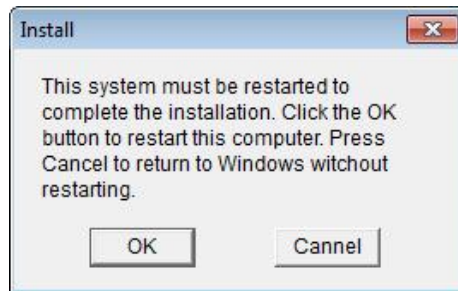


Figure 4.1.10

## 4.2 Software uninstallation

1. Select "Control Panel" > "Program & Features" > " Alcon Smart Surveillance Professional V7.12A EXE " > "Uninstall"

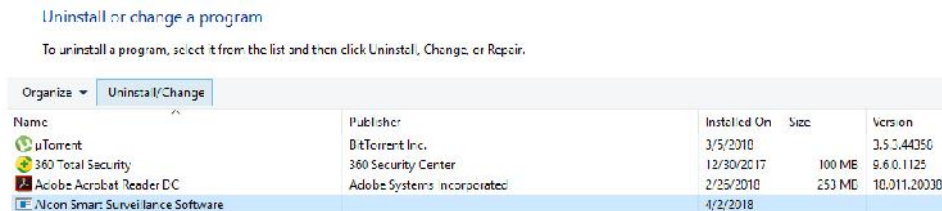


Figure 4.2.1

2. Click "OK". Program uninstallation will stop all running programs related to ASS, continue to uninstall. As shown in Figure 4.2.2

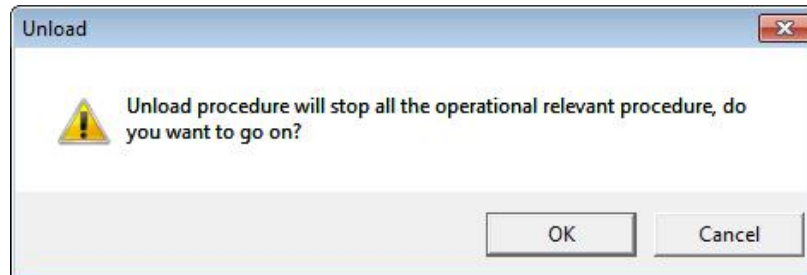


Figure 4.2.2

3. Successively click "Next" > "Finish", finish the uninstallation. As shown in Figures 4.2.3 and 4.2.4



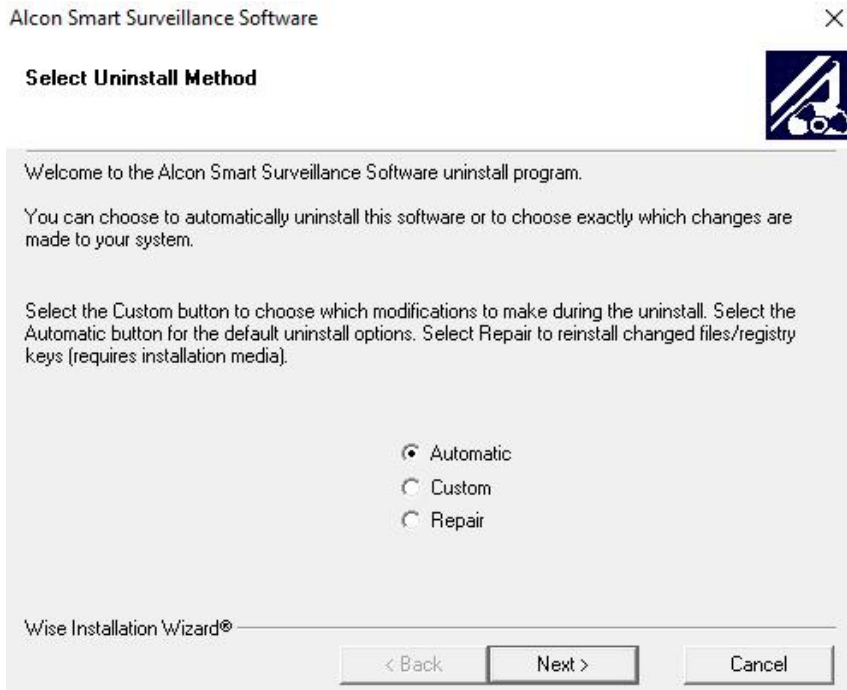


Figure 4.2.3

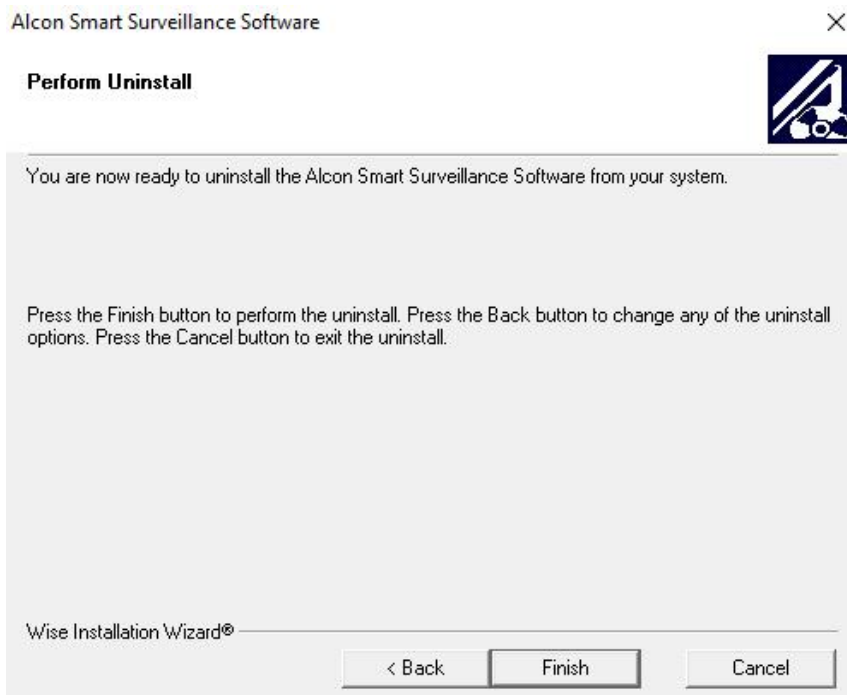


Figure 4.2.4

## V. Login and Framework Setup of Software

### 5.1 Stand-alone version login



Double click app icon on the desktop to enter system login interface, as shown in Figure 5.1.1.



Figure 5.1.1

(Note: default username and password are admin and 1111 respectively)

[More], click "More" to modify the user's password entered.

[Cancel], click "Cancel" to close down ASSS login interface.

### 5.2 Framework setup


Enter correct username and password, click  to enter main ASSS program interface. Default grouping. As shown in Figure 5.2.1



Figure 5.1.2

**5.3** Go to home & click on system. the symbol as shown in figure 5.1.2

**5.4** Click on p2p configuration> select urope region > Save configuration > reboot the system. Interface as shown in figure 5.1.3

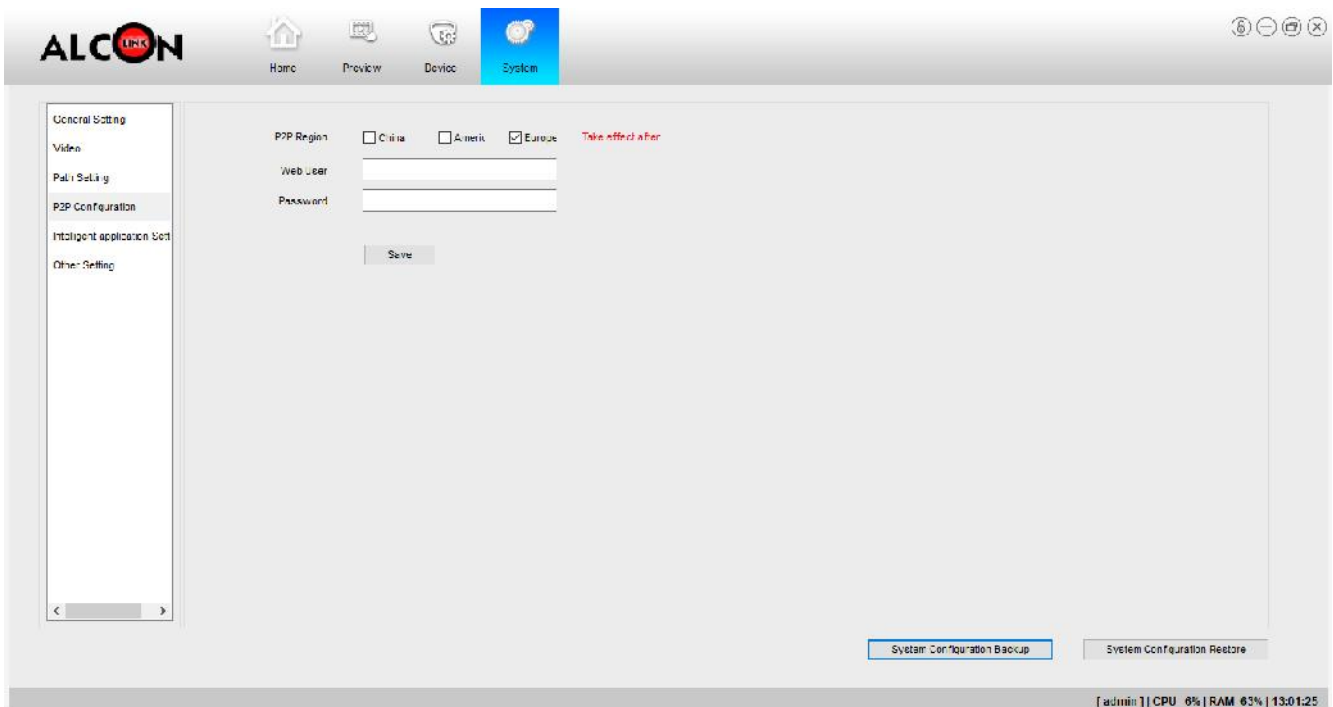


Figure 5.1.3



Figure 5.1.4

**5.5** Go to home & click on device. the symbol as shown in figure 5.1.4

## 5.6 Click on add device. Interface as shown in figure 5.1.5

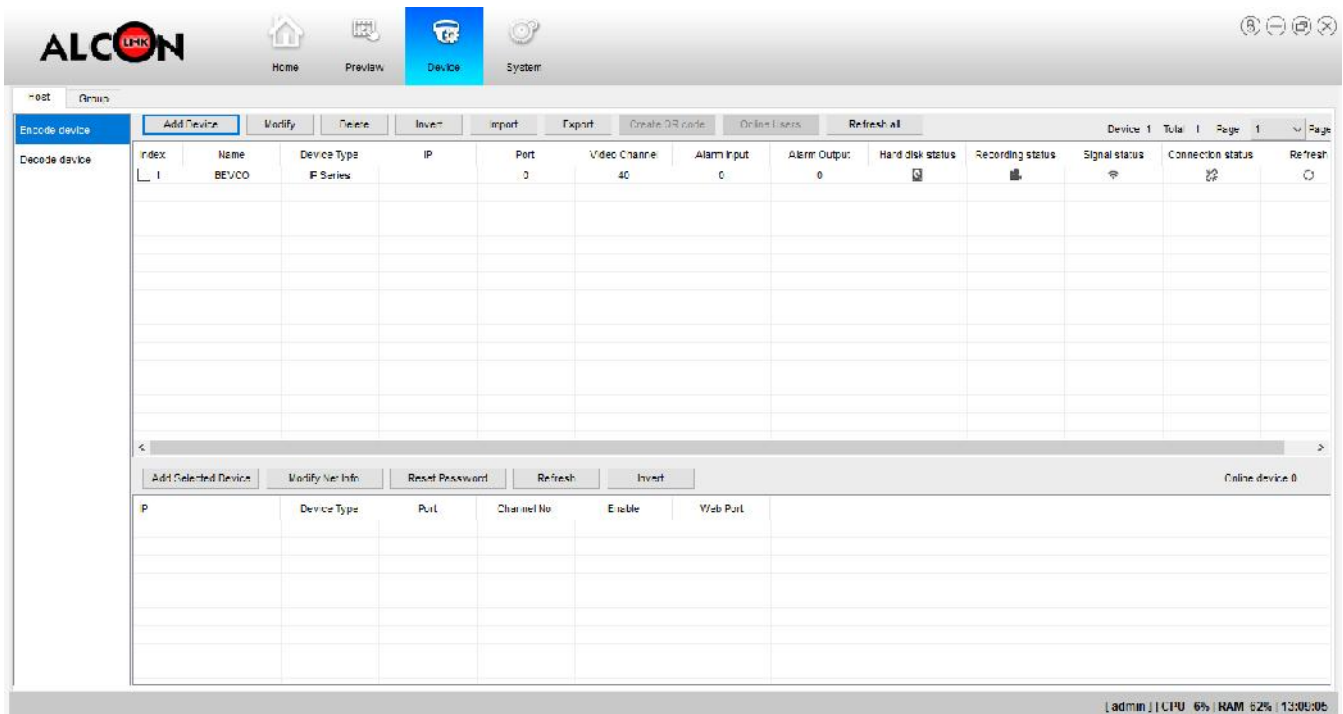


Figure 5.1.5

## 5.7 Select p2p mode in add type > check mark on offline add > put NVR's p2p ID

- device name : as per user > user name & password : admin & admin > Video channel : as per NVR's channel no > Alarm input & output : 0 & 0 > check mark on import to group > Click on add. Interface as shown in figure 5.1.6

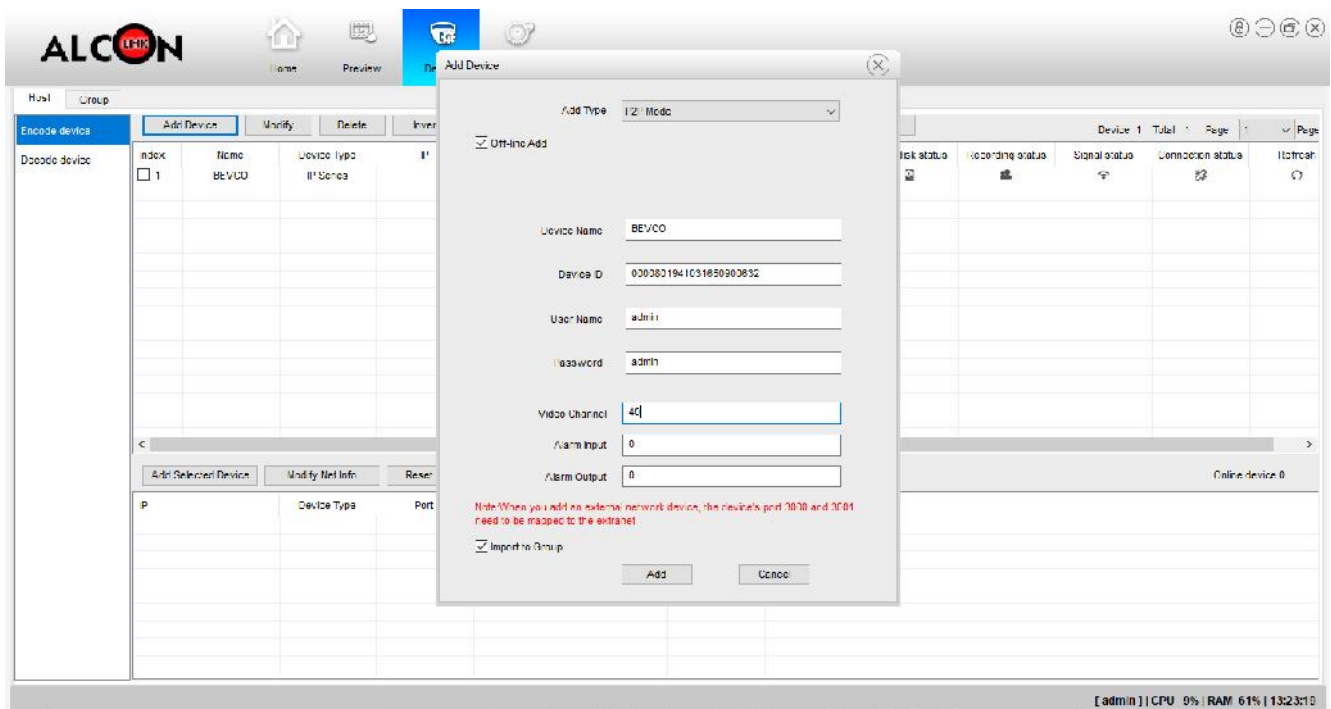


Figure 5.1.6

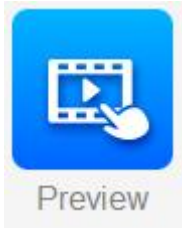


Figure 5.1.7

5.8 Go to home & click on preview. the symbol as shown in figure 5.1.7

5.9 Select device list > Check mark on channel-1 > It will start preview of live channels. Interface as shown in figure 5.1.8

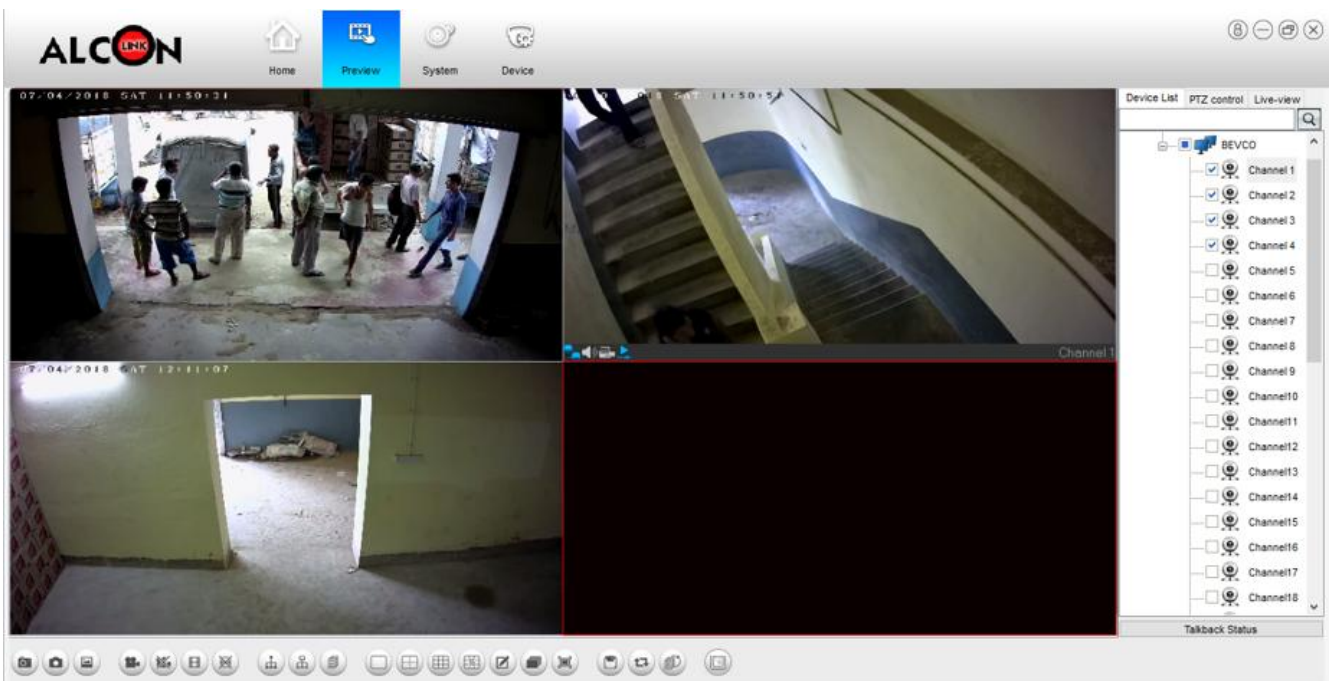


Figure 5.1.8

**--:Details For Technical Support:--**

**Email : [support@Alconlink.com](mailto:support@Alconlink.com)**

**Mobile : +919674176555**

**Website : [www.alconlink.com](http://www.alconlink.com)**

**ALCON<sup>TM</sup>**  
**LINK**



**Thank You**

**Prepared By: S.K. Jana**  
**For Alcon Wireless Private Limited**